



BIOC3 Biometric Reader

User's Manual

Contents

<u>1. DESCRIPTION</u>	3
<u>2. SPECIFICATIONS</u>	3
<u>3. MOUNTING</u>	3
<u>4. WIRING</u>	4
<u>5. CONNECTING BIOMETRIC READERS TO EWS CONTROLLER</u>	4
5.1 CONNECTING BIOMETRIC READERS IN SAME RS485 LINE WITH THE EWS CONTROLLERS	5
5.2 CONNECTING BIOMETRIC READERS WHEN ALL THE CONTROLLERS HAVE TCP/IP COMMUNICATION	5
<u>6. CONNECTING BIOMETRIC READERS TO 3RD PARTY CONTROLLER</u>	6
6.1 CONVERTERS PIN DESCRIPTION	6
<u>7. ENROLLMENT</u>	7
<u>8. CONFIGURING THE BIOMETRIC READERS IN PROS SOFTWARE</u>	7
8.1 ADDING BIOMETRIC READER	7
8.2 ENROLLING FINGERPRINTS FROM A READER	8
8.3 ENROLLING FINGERPRINTS FROM DESKTOP READER	9
8.4 DELETING FINGERPRINTS	10
8.5 UPLOADING THE FINGERPRINTS TO THE BIOMETRIC READERS	10
8.6 FIRMWARE UPDATE	11
8.7 SENSOR CALIBRATION	11
8.7 SEND CONFIGURATION	11
8.9 ADVANCED SETTING	11
<u>9. CONFIGURING THE BIOMETRIC READERS IN BIOMANAGER</u>	12
9.1 ADD READER	12
9.2 EDIT READER	13
9.3 DELETE READER	14
9.4 CALIBRATE SENSOR	14
9.5 ADD USER	14
9.6 EDIT USER	14
9.7 DELETE USERS	15
9.8 ENROLL FINGERS	15
9.9 UPLOAD FINGERPRINTS TO READER	15
9.10 DELETE FINGERPRINTS	16
9.10.1 Deleting one user from the biometric reader	16
9.10.2 Deleting all users from the biometric reader	16
9.11 COMPLEX USER UPLOAD	16
9.12 CUSTOM WIEGAND	17
<u>10. WIEGAND PROTOCOL DESCRIPTION</u>	18
<u>11. SAFETY PRECAUTIONS</u>	19
<u>12. TROUBLESHOOTING</u>	19

1. DESCRIPTION

BIOC3 is a Wiegand biometric reader for indoors access control applications. It offers storage up to 9500 fingerprints and programmable Wiegand Output (8 to 128 bits).

Configuration of the readers and fingerprint enrollment is done through PC Software.


Connection between the biometric readers is RS485 and it is used for fingerprint transfer and configuration.

When used with third party controllers, the connection between the Biometric readers and the PC is done through a converter (CNV100-RS485 to RS232 or CNV200-RS485 to USB or CNV300-RS485 to TCP/IP). Only one converter is needed per system (one converter for 1, 2, 3...30, 31 Biometric readers)




The tamper switch output can trigger the alarm system, if an attempt is made to open or remove the unit from the wall.

2. SPECIFICATIONS


Fingerprint capacity	up to 9500 fingerprints
Technology	Biometry
Authentication	Finger
Fingerprints per user	1-10 fingerprints
Interface	Wiegand 8 to 128 bits; Default: Wiegand 26bit
Protocol programming	By PROS software (EWS system) and BIOMANAGER (all access control systems)
Cable distance	50m
Fingerprint Sensor Type	Capacitive
1:1000 identification time	970 msec, including feature extraction time
Fingerprint enrolment	On the reader or from the USB desktop reader (BIOE)
Panel Connection	Cable, 1m
Green and Red LED	Externally Controlled
Orange LED	Idle mode
Buzzer	Yes
Backlight ON/OFF	Yes, by software settings
Tamper	Yes
Consumption	100mA
IP Rating	54
Power supply	9-14V DC
Operating Temperature	0°C to +40°C
Dimensions (mm)	92 x 51 x 25
Housing	Moulded Aluminium
Colour	Silver, Red, Green, Dark Grey, Blue, White

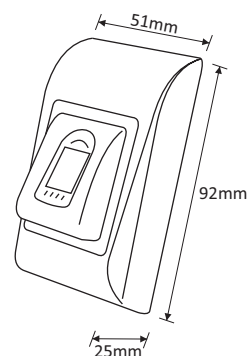

3. MOUNTING

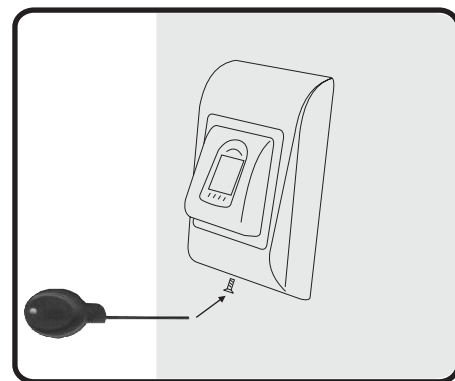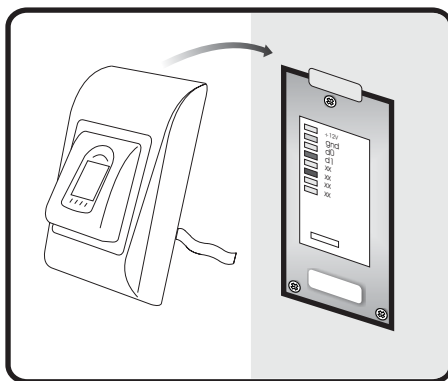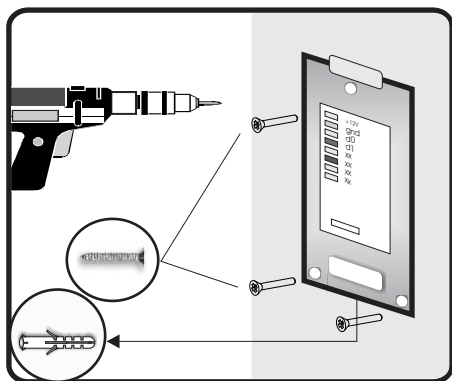


4. WIRING J

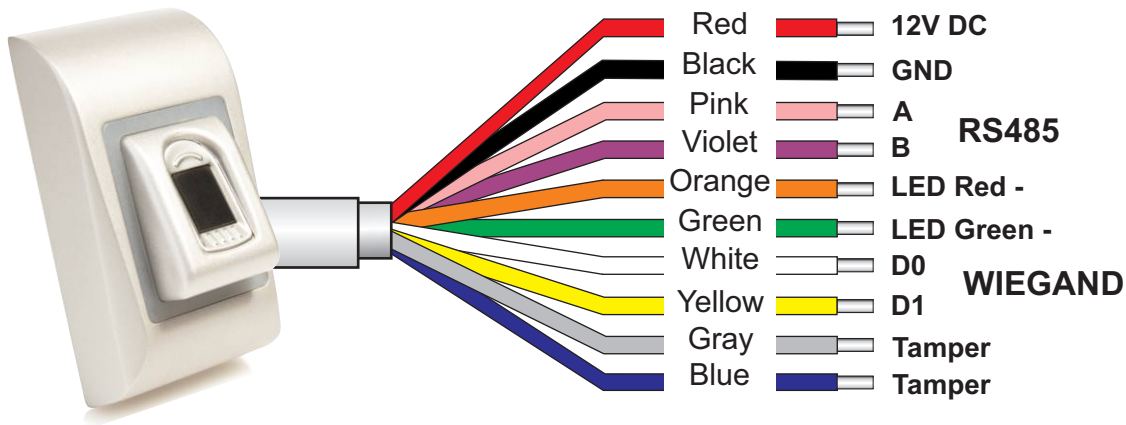


12V DC	9-14V DC
GND	ground
A	RS485 A
B	RS485 B
LR-	Red LED -
LG-	Green LED -
D1	Data 1
D0	Data 0
Tamper	Tamper Switch(NO)
Tamper	Tamper Switch(NO)

5. CONNECTING BIOMETRIC READERS TO EWS CONTROLLER

- The Biometric readers can be connected to virtually any controller that conforms to Wiegand format standards (standard Wiegand 26bit or self-defined Wiegand).
- The lines D0 and D1 are the Wiegand lines and the Wiegand Number is sent through them.
- The RS485 line (A, B) is used for fingerprint transfer and reader settings.
- The Biometric readers must be powered from the controller.
- If you use different power supply for the biometric reader, connect the GND from the both devices to ensure correct transfer of the wiegand signal
- When you have connected the reader and powered on, the LED should flash in orange light + 2 beeps. This lets you know it's on and ready for use.
- Fingerprint enrollment is done from the PC Software. Connection between the Biometric readers and the PC must be established.

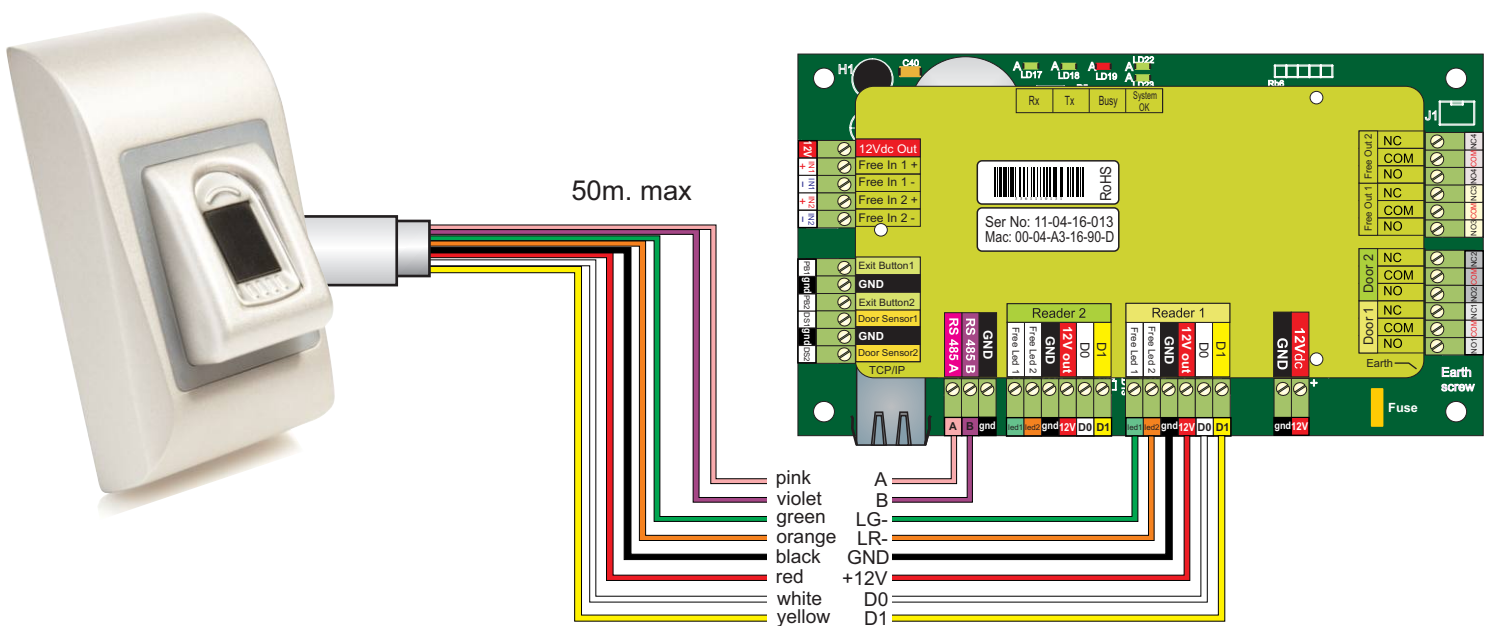


5.1 CONNECTING BIOMETRIC READERS IN SAME RS485 LINE WITH THE EWS CONTROLLERS

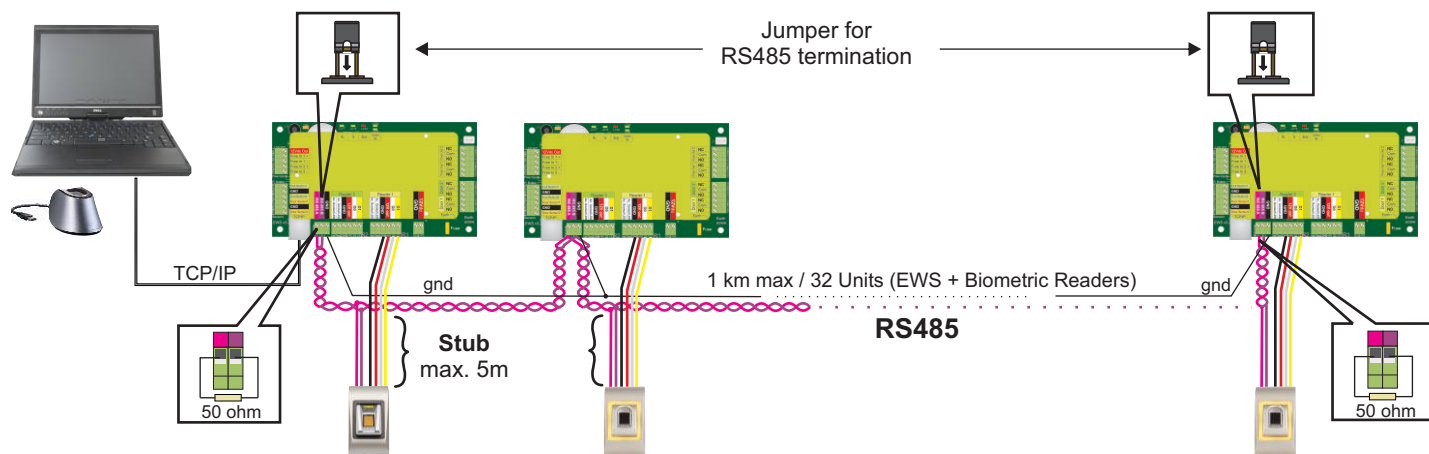


- The Biometric readers are connected through RS485 bus. The same RS485 bus that the EWS controllers are connected to.
- Maximum units in one network (EWS + Biometric readers) is 32.
- If there are more than 32 units in one network, please utilize RS 485 HUB to connect.
- The RS485 Line should be configured in the form of a daisy chain, NOT in a form of a star. If star must be used in some points, keep the stubs from the RS485 backbone as short as possible. Maximum length of the stub is dependant of the installation (total number of devices in RS485 line (total cable length, termination, cable type...)) so recommendation is to keep stubs shorter than 5 meters, keeping in mind that this can be possible reason for errors in communication with PC software
- **The cable must be twisted and shielded with a min. 0.2 mm² cross section.**
- Connect the ground (0V) of each unit in the RS 485 Line using a third wire in the same cable.
- The shield of the communication cable between two devices must be connected to the EARTH from ONE side of the RS 485 Line. Use the side that has earth connection to the building's grounding network.

5.2 CONNECTING BIOMETRIC READERS WHEN ALL THE CONTROLLERS HAVE TCP/IP COMMUNICATION

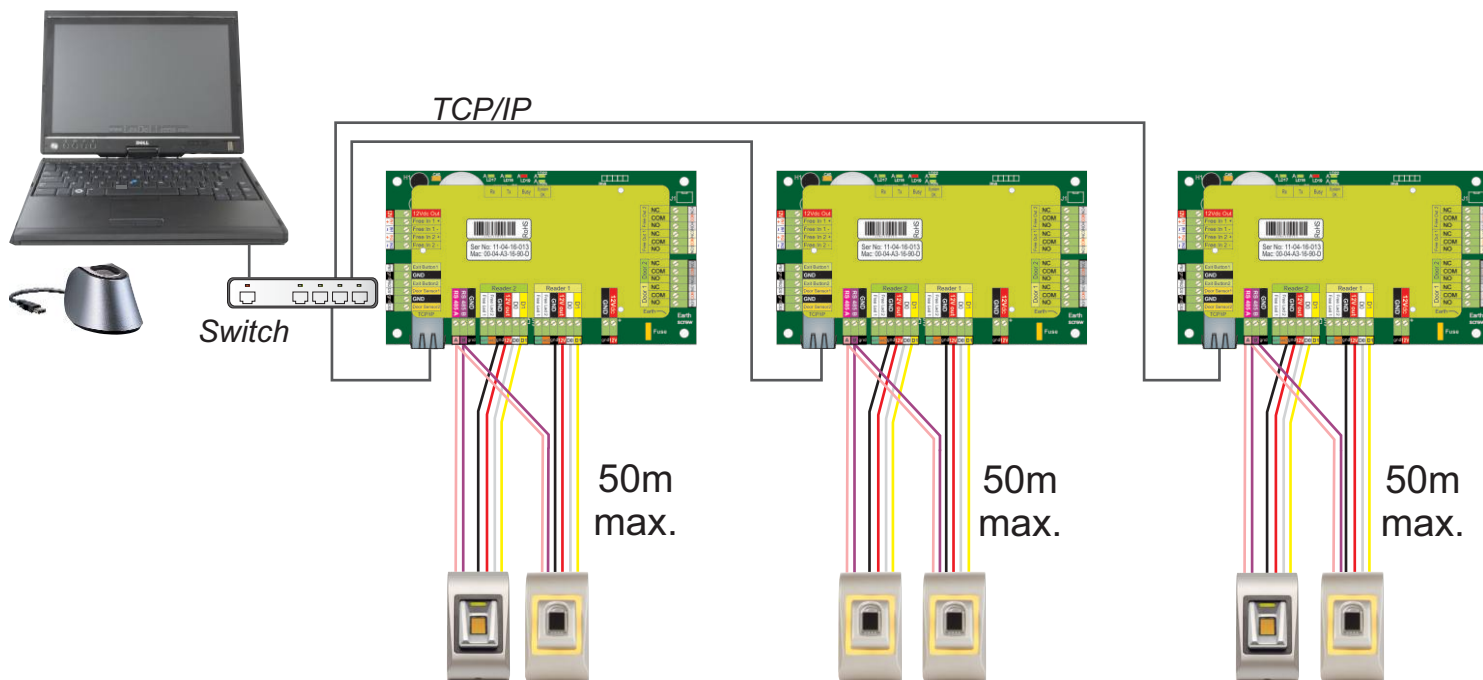


- When all the controllers are connected via TCP/IP, then the RS485 network becomes local (from Reader 1 to the Controller then to the Reader 2).
- Connect the readers directly to the Rs485 terminals in each controller.
- If the distance Reader-Controller is high (50meters) and if the communication with the reader can not be established, then terminate the RS485 network by closing the jumper in the EWS Controller or as described in chapter 4.

6. CONNECTING BIOMETRIC READERS TO THIRD PARTY CONTROLLERS

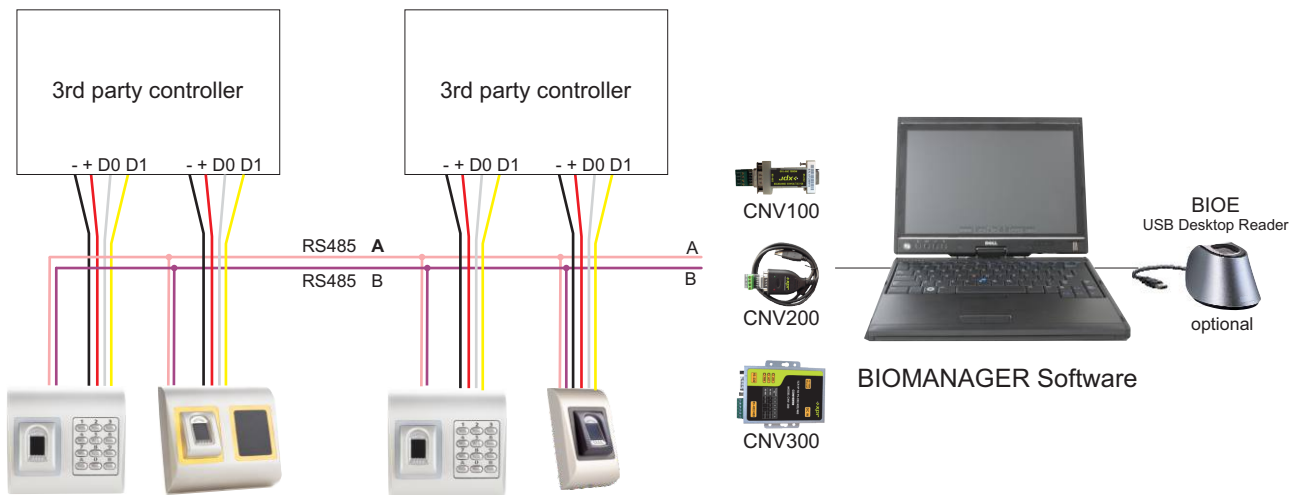


- Connect the lines D0, D1, Gnd and +12V to the third party controller.
- Connect the RS485 Line (A, B) to the converter. Connect the converter in the PC.
- Fingerprint enrollment is done from the PC Software. Connection between the Biometric readers and the PC must be established.
- The Biometric readers communicate with each other with a RS485 and with the PC Software through a Converter.
- The RS485 Line should be configured in the form of a daisy chain, NOT in a form of a star. Keep the stubs from the RS485 backbone as short as possible (not more than 5 meters)
- Only one converter per installation is needed, not per reader.

6.1 CONVERTERS PIN DESCRIPTION

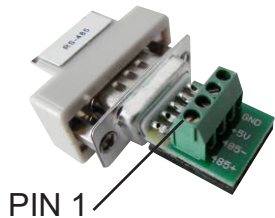

CNV100
Converter RS485 to RS232
Does not requires installation

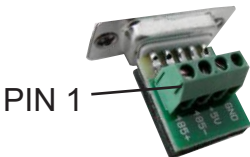


CNV200
Converter RS485 to USB
Requires installation as USB serial device (refer to CNV200 Manual). The Drivers are located on the CD.



CNV300
Converter RS485 to TCP/IP
Does not require installation. IP address set through Internet Browser(refer to CNV300 Manual)

Biometric Reader	Converter
RS 485 A	PIN 1 (RS 485 +)
RS 485 B	PIN 2 (RS 485 -)

7. ENROLLMENT

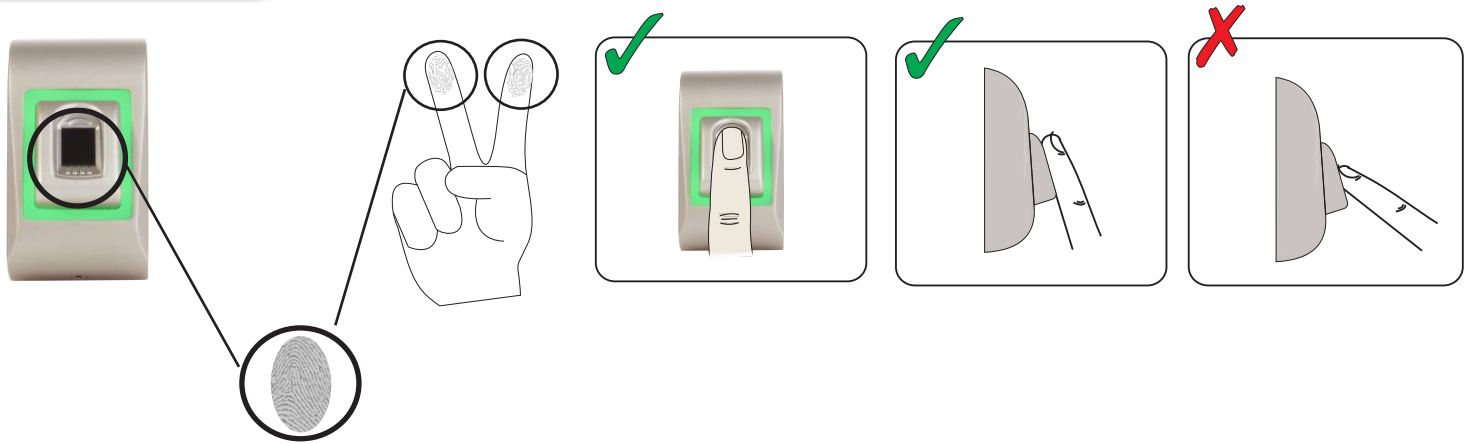

8. CONFIGURING THE BIOMETRIC READERS IN PROS CS SOFTWARE

8.1 ADDING BIOMETRIC READER

1. Expand the Door item to view the readers
2. Right click on the reader and select properties (8.1)
3. In the Basic tab, for "Type" of the Reader select "BIOC3". (8.2)
4. After selecting the type, a third tab will appear "Biometric". Go to that tab and put the serial number of the Biometric Reader. (8.3)

Important Note: The serial number of the reader can be found on a sticker inside the reader, on the packaging box and it can be search from the software (right click on the portal/search devices/readers). (8.4 & 8.5)


To check if the reader is On Line, right click on the reader and select "Check version". In the Event Window a message should appear "Device ON Line, Type: BIOC3" (8.6)




8.1



8.3

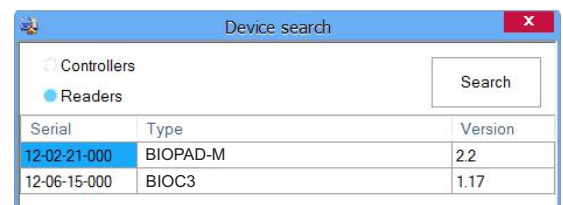


8.5

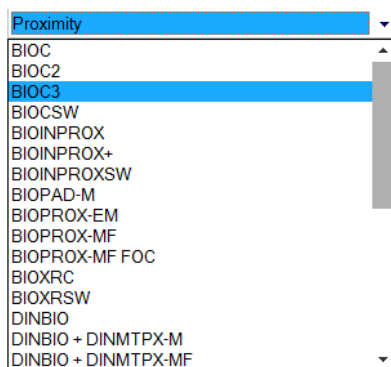

8.2



8.4

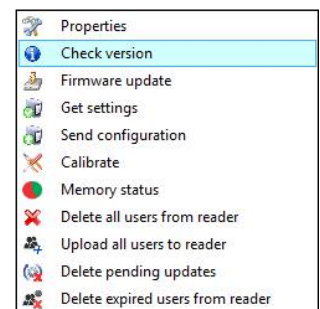


8.6


8.2 ENROLLING FINGERPRINTS FROM A READER

- 1. Open the Users Window and create a new user.
Click on "New User", put a name and ID(card number). (8.7)
- 2. Go to the "Biometric" Tab
- 3. Select the reader(with left click) from which the enrollment will be done. (8.8)
- 4. Right click on the fingertip and select enroll. (8.9)
- 5. In the next 25 sec. present the finger on the selected reader and the finger tip will turn red, with the percentage of successful enrollment shown next to the fingertip. (8.10)
In these 25 sec. the reader will continuously blink in orange.
- 6. Repeat point 4&5 for each finger that should be enrolled.
- 7. Click on "Save New" and the fingerprint will be sent automatically to all Biometric Readers where that user has access, i.e. to all the readers according to the Access Level assign to that user.


Example:
If the user has "Unlimited" Access level then the fingerprints will be sent to all readers, if the user has Access level only for Reader1 and Reader 3 then the fingerprints will be sent only to those two readers.
Note:
To check if all the fingerprints are sent to the reader, right click on the reader and select "Memory Status". (8.11)
In the event window a line will appear indicating the number of fingerprints stored in the reader. (8.12)
Note:
If more fingerprints are added for one user, all fingerprints will send the same Wiegand Code to the controller, the one written in the field User ID(card Number).

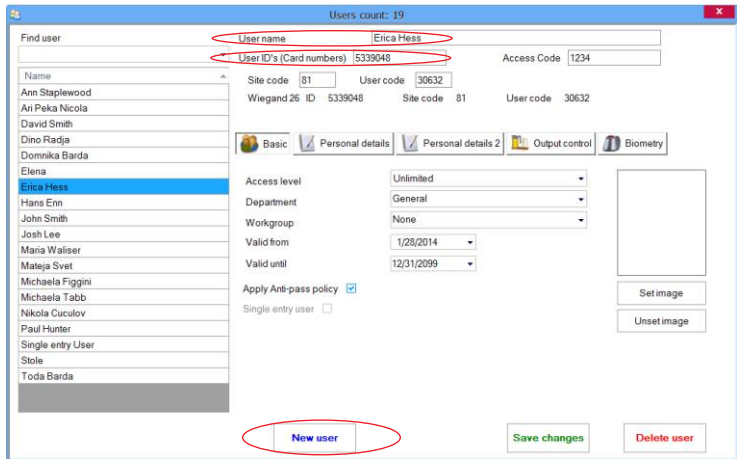


8.7

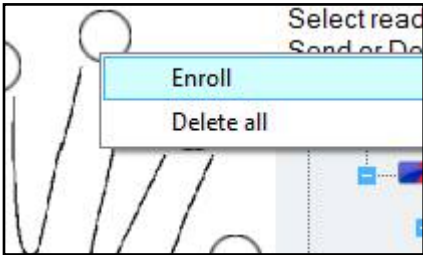


8.9

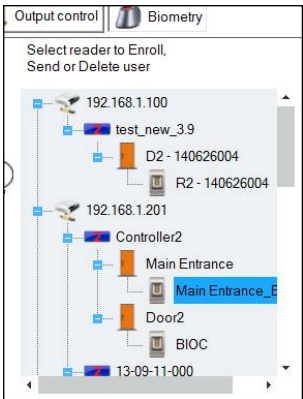

8.8

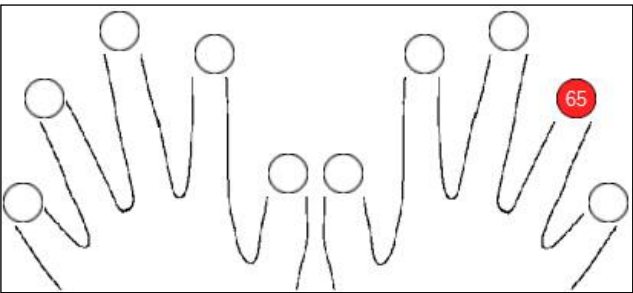

8.10

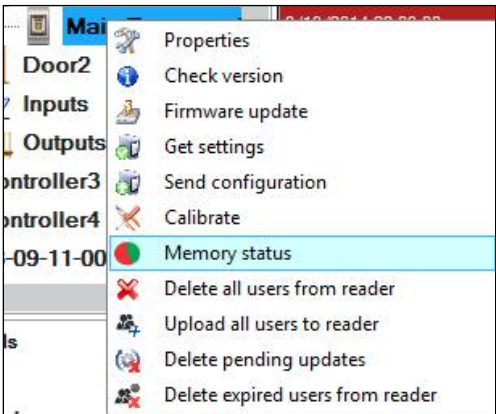

8.11

Reader	Door	Event
BIOC3		Enrolled fingers : 28

8.12

8.3 ENROLLING FINGERPRINTS FROM DESKTOP READER

Plug the Desktop Reader (BIOE) in the PC. If the device is not installed automatically use the drivers located on the CD provided with the Biometric reader. It is installed in the same way as a USB Device. When the desktop reader has been installed it will automatically appear in the Software. (8.13)


- 1. Open the Users Window and create a new user.
Click on “New User”, put a name and ID(card number). (8.7)
- 2. Go to the “Biometric” Tab
- 3. Select the USB desktop Reader (with left click).
- 4. Place the finger on the BIOE, right click on the fingertip and select enroll. (8.9)
- 5. The finger tip will turn red, with the percentage of successful enrollment shown next to the fingertip. (8.10)
- 6. Repeat point 5 for each finger that should be enrolled.
- 7. Click on “Save New” and the fingerprint will be sent automatically to all Biometric Readers where that user has access, i.e. to all the readers according to the Access Level assign to that user.

If the reader is off line, the fingers will be sent upon the connection is established between PROS server and the reader. No need for additional enrollment or actions. The fingerprints will be sent as soon as communication is established.


Example:
If the user has “Unlimited” Access level then the fingerprints will be sent to all readers, if the user has Access level only for Reader1 and Reader 3 then the fingerprints will be sent only to those two readers.

Note:
To check if all the fingerprints are sent to the reader, right click on the reader and select “Memory Status”. (8.11)
In the event window a line will appear indicating the number of fingerprints stored in the reader. (8.12)


Note:
If more fingerprints are added for one user, all fingerprints will send the same Wiegand Code to the controller, the one written in the field User ID(card Number).

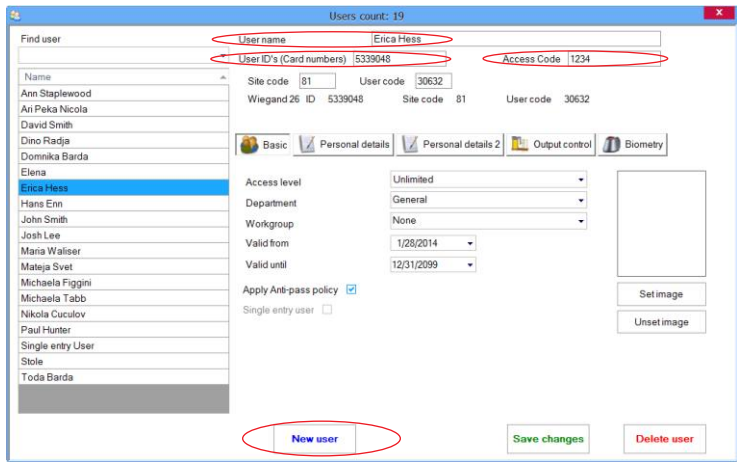


8.7

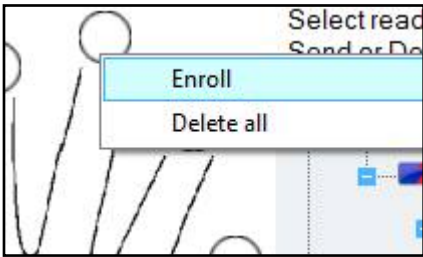


8.9

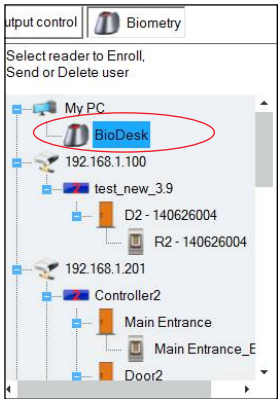

8.13

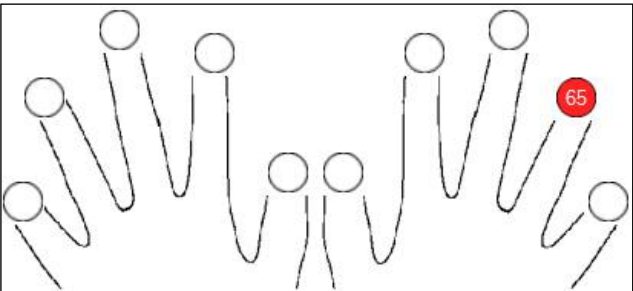

8.10

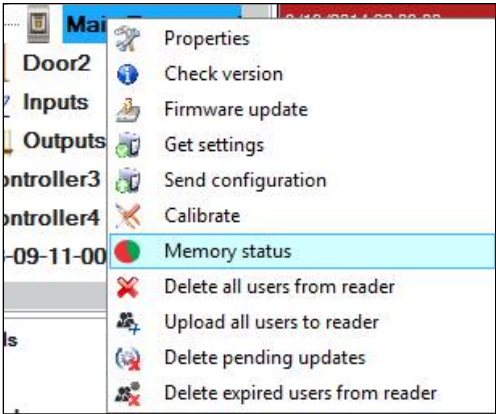

8.11

Reader	Door	Event
BIOC3		Enrolled fingers : 28

8.12

8.4 DELETING FINGERPRINTS

In General, the fingerprints are stored in the Biometric reader and in the Software. Deleting can be done only in the readers or from both places.

Deleting one user from the biometric reader

- Select the User
- Click on “Delete User”. The User together with its fingerprints will be deleted from both the software and the fingerprint readers. (8.14)


Deleting all users from the biometric reader

- Right click on the reader and select “Delete all users from reader” (8.15)


Delete one or more fingerprints

- Select the User and open the “Biometric” tab
- Go to the fingertip that needs to be deleted, right click and select ”Delete” for one finger or “Delete All” for all fingers of the User.
- Click “Save Changes”.


With this procedure the User's fingerprints are deleted from the software and from the reader. (8.16)

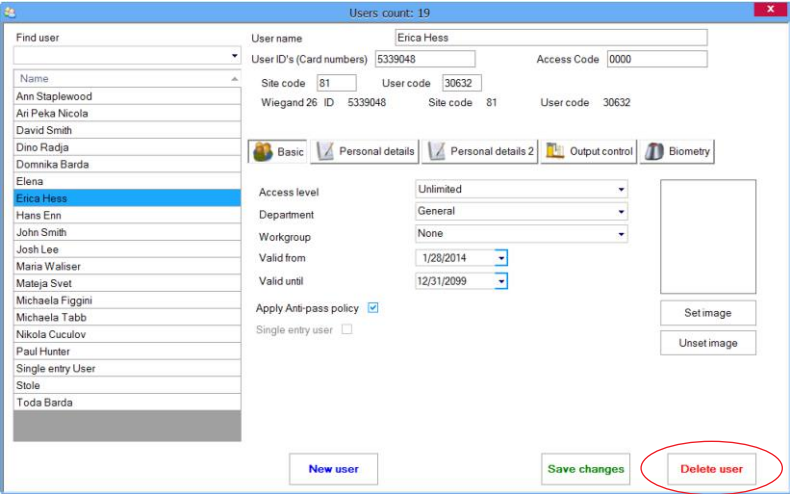

8.14

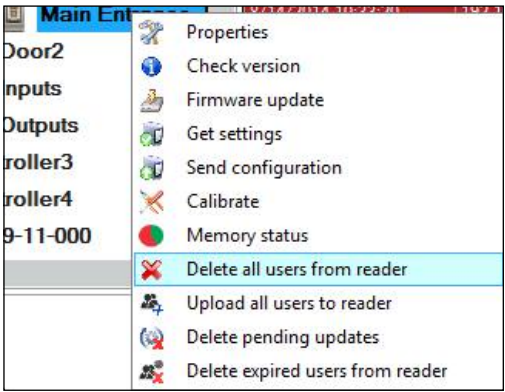

8.15

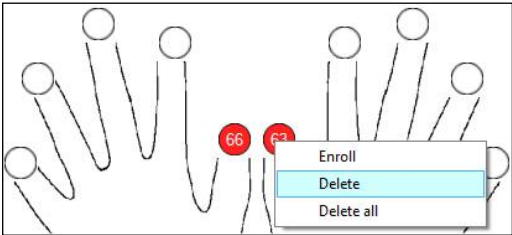


8.16

8.5 UPLOADING THE FINGERPRINTS TO THE BIOMETRIC READERS

- Right click on the biometric reader
- Select “Upload all users to reader”
- While receiving the fingerprints the reader will blink in orange.

Note: Use this feature when you change or add a reader, if pending tasks are deleted in the software or if there are doubts that fingerprints in the reader memory are not synchronized with the software database. In normal usage, the fingerprints are sent automatically and this feature is not used.

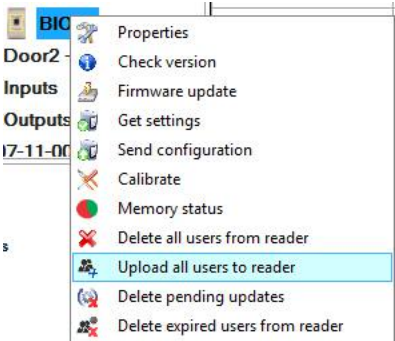

8.17

8.6 FIRMWARE UPDATE


Right-click on the reader and select Firmware update menu (8.18)

On the Firmware update window, click on the Browse button (8.19). The default location of the firmware files installed with PROS CS is in the folder "Firmware".


Select the firmware file with a ".xhc" extension.

Click on the Upload button

Important: Wait for the update end message. Do not turn off the reader, the software or any communication device in between during the entire process.

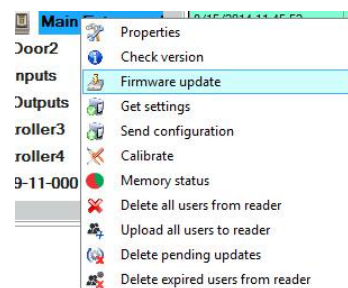

8.18

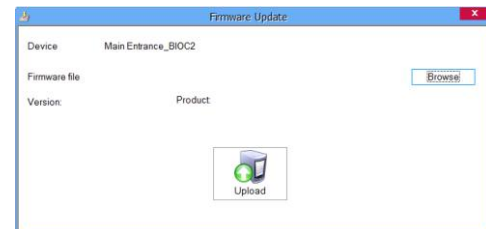


8.19

8.7 SENSOR CALIBRATION

Right click on the biometric reader and select "Calibrate" and wait for confirmation message.


Note: It is recommended to do a calibration while commissioning the reader and in cases when there are problems with reading the fingers

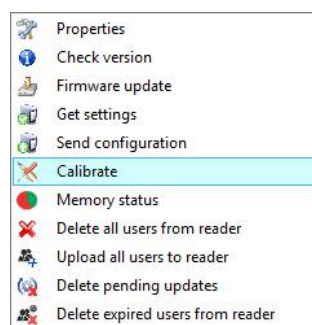

8.8 SEND CONFIGURATION

- Right-click on the reader and select the Send configuration menu
- See the events panel to check the configuration flow

Note: The biometric reader gets its settings automatically. This function is used if the reader was off line while making the changes.

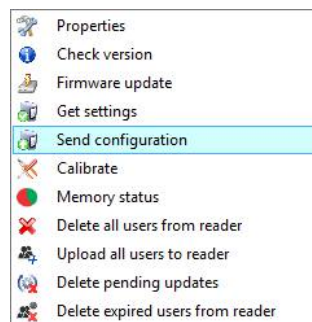

8.9 ADVANCED SETTINGS

Send This ID for:

Unknown Finger sends the desired Wiegand when an unknown finger is applied.

Click on the Save & Exit button

Sound level:


Sound level of the device (ON or OFF)

Finger Acceptance Flexibility:

Accepted tolerance. The recommended value is "Automatic Secure".

Sensitivity:

Bio-sensor sensitivity, the recommended value is 7, most sensitive.

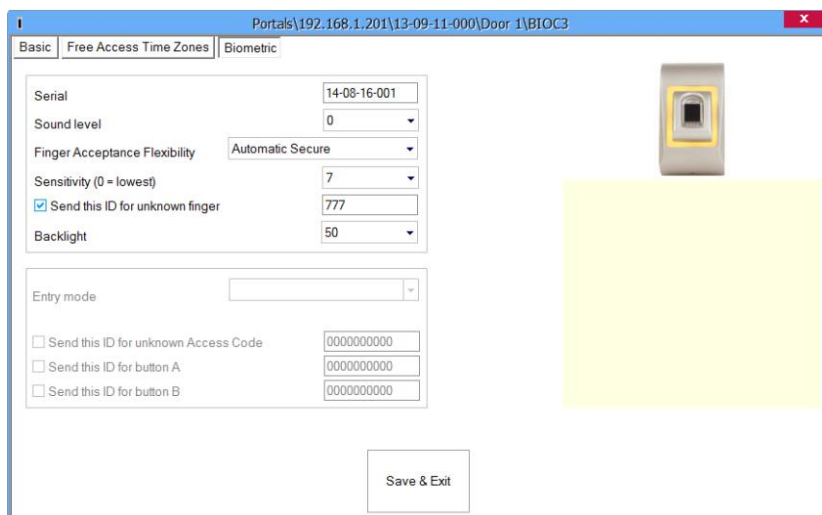

9 CONFIGURING THE BIOMETRIC READERS IN BIOMANAGER

BioManager is software for fingerprint management of XPR Biometric readers, when used with third party access controllers.

Main functions:

- Fingerprint Enrollment

It can be done by ANY Biometric reader in the network or by Desktop (USB) Biometric reader.

Note: The Desktop Biometric reader BIOE is only compatible to Biometric readers with capacitive sensor, not with the ones with thermal sensor.

- Fingerprint Transfer

Finger templates can be sent to any Reader in the Network. Different Users can be sent to different Biometric readers.

- PIN Codes management and transfer

PIN Code length configuration (1 to 8 digits) and PIN Code transfer.

- Wiegand Output Configuration

The Wiegand output of the Biometric reader can be customized bitwise.

9.1 ADD READER

Right-click on the portal connected to the reader and select Add reader




Fill the Reader form



Click on **Save** and the reader icon appears under the selected portal



Right-click on reader and select **Version info**

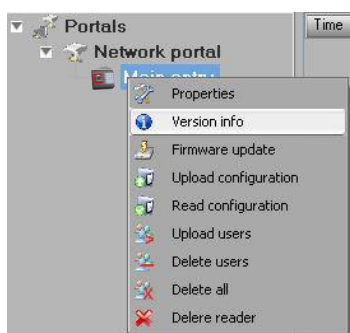


If reader is online, new line is added on top of the event table

Time	Portal	Reader	Event	User
28/03/2010 17:41:30	Network portal	Main entry	Device online	Type: BioXr Version: 1.22

If reader is not online, following line is added on top of the event table

Time	Portal	Reader	Event	User
	Network portal	Main entry	No response	

If reader is online, right click on reader and select **Upload configuration**

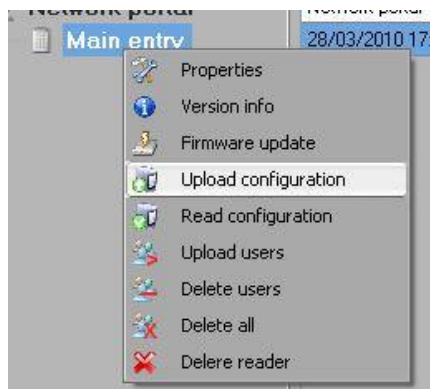


Check at event table if configuration was successful

Time	Portal	Reader	Event	User
28/03/2010 17:58:16	Network portal	Main entry	Configure Wiegand	Succes
28/03/2010 17:58:15	Network portal	Main entry	Configure Flexibility Level	Succes
28/03/2010 17:58:15	Network portal	Main entry	Save Flexibility Level	Succes
28/03/2010 17:58:15	Network portal	Main entry	Configure parameters	Succes


9.2 EDIT READER

Right-click on the reader and select **Properties**

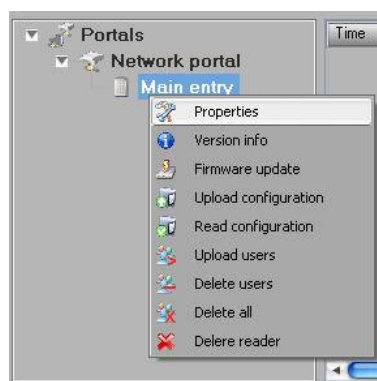

Edit reader properties and click **Save** button

Right click on the reader and select **Upload configuration**

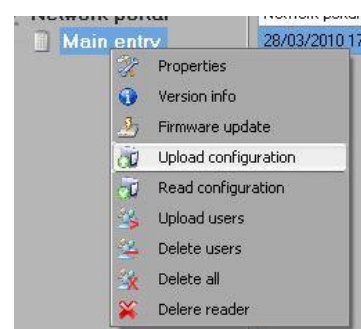


Check at event table if configuration was successful

Time	Portal	Reader	Event	User
28/03/2010 17:58:16	Network portal	Main entry	Configure Wiegand	Succes
28/03/2010 17:58:15	Network portal	Main entry	Configure Flexibility Level	Succes
28/03/2010 17:58:15	Network portal	Main entry	Save Flexibility Level	Succes
28/03/2010 17:58:15	Network portal	Main entry	Configure parameters	Succes


9.3 DELETE READER

Right-click on the reader and select **Delete reader**

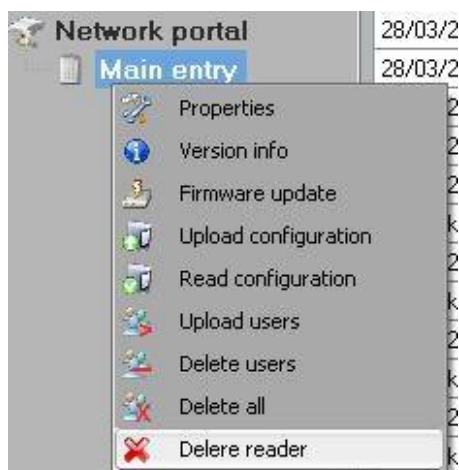

9.4 CALIBRATE SENSOR

Right-click on the reader and select **Calibrate**



See the events panel to check the calibration flow

It is recommended to do sensor calibration once after reader is mounted. Clean the fingerprint sensor before calibration.

9.5 ADD USER

At user table, click on the last empty user field and enter user name

#	User	ID (User code)	PIN code
	Tom Smith	12345	1111
		0	0

Click on ID (User code) field and enter ID number. This number will be sent by the reader to the access controller when user finger is recognized by the reader


Click on PIN code field and enter the PIN. PIN code is used at readers with keypad. When PIN code is typed at reader, User ID will be sent to the access controller

9.6 EDIT USER

- Find the user at user table to edit
- Click on the user field for edit (Name, ID or PIN)
- Type new value
- Press Enter on the keyboard

Important:

When ID is changed, warning message is displayed reminding that if ID exist in some reader, should be deleted from reader prior to change.

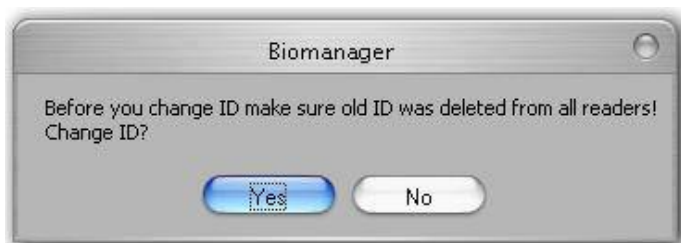


9.7 DELETE USERS

- Check the users to be deleted
- Right-click on the users table
- Click on **Delete checked users** menu

<input checked="" type="checkbox"/>	John Do	567	0067
<input type="checkbox"/>	Lane Ly		0000
<input type="checkbox"/>			0

Confirm warning message

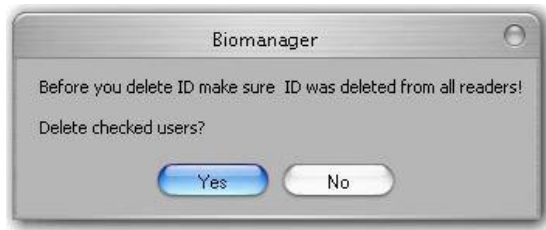


9.8 ENROLL FINGERS



- Select the User in the User Column, not the check box (the check box is for sending the fingerprints) and the User name cell will turn blue
- Select the Biometric reader or Desktop reader BIOE from where the enrollment will be done

#	User	ID (User code)	PIN code
<input type="checkbox"/>	Tom Smith	12345	1111
<input type="checkbox"/>	John Do	567	0067
<input type="checkbox"/>	Lane Ly	456	0000
<input type="checkbox"/>		n	n

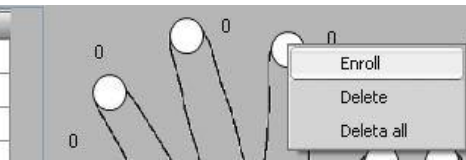

Right click on the fingertip and select **Enroll**



Swipe the finger on the Reader and the finger tip will become blue, with percentage of successful enrollment given right beside the fingertip


Note: If more fingerprints are added for one user, all fingerprints will send the same Wiegand Code to the controller.

9.9 UPLOAD FINGERPRINTS TO READER

Check the users which fingerprints will be sent to the Reader

#	User
<input checked="" type="checkbox"/>	Tom Smith
<input checked="" type="checkbox"/>	John Do
<input checked="" type="checkbox"/>	Lane Ly

Right-click on the Biometric reader those users should be sent and select **Upload users**

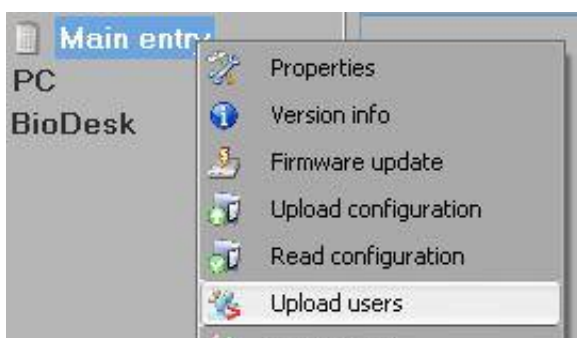

As each user is being sent, the checkbox will become unchecked indicating that the user is successfully sent. In the same time the orange LED of the Biometric reader blinks

Note: Average time for transferring one finger template is 0,6 sec.

Note: The PIN Codes are also being sent, if there are any.

9.10 DELETE FINGERPRINTS

After the transfer, the fingerprint are stored in the Biometric reader and in the PC.


Deleting can be done only in the software, only in the readers or from the both places.

9.10.1 Deleting one user from the biometric reader

Select the users checkbox.

#	User
<input checked="" type="checkbox"/>	Tom Smith
<input checked="" type="checkbox"/>	John Do
<input checked="" type="checkbox"/>	Lane Ly


Right click on the Reader and select **Delete Users**

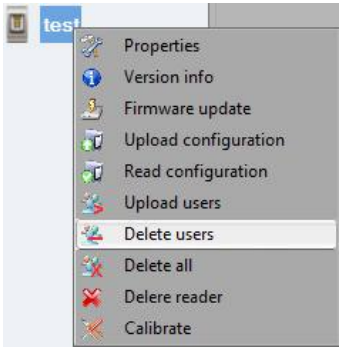

The user is deleted from the reader, but his fingerprints are still in the software's database. They can be sent ones again without the need of re enrollment.

9.10.2 Deleting all users from the biometric reader

Right click on the Reader and select **Delete all**

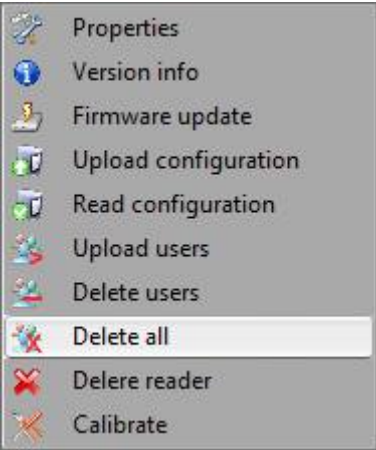

9.11 COMPLEX USER UPLOAD

Complex user upload is used to sent multiply user selection to more readers

Click on **Upload table** at main menu



User	Main entry	Basement	Factory	Storage
John Do				
Lane Ly				
Tom Smith				

- Select User
- Clear User
- Select Reader
- Clear Reader
- Select all
- Clear all
- Upload users to readers
- Delete Users from readers

As upload is progressing, check boxes are cleared mining appropriate combination was successfully done
When upload is over, if there are still checked items, repeat the upload command

BioManager has defined Wiegand 26 and 34 bit as standard options and other 3 Wiegand settings as user definable.

- Settings
- Memory Status
- Wiegand
- System parameters
- Password
- Departments

- Custom 1
- Custom 2
- Custom 3
- Wiegand26
- Wiegand34

At Wiegand setup window select one from customs Wiegand

The screenshot shows the "Wiegand" configuration window. At the top, there's a title bar with standard OS controls. Below it, a "Custom 1" label is next to a plus icon. The "Length (bits)" is set to 30, with an "Apply" button nearby. A "Save" button is also present. Two tables are displayed:

Item	Location	Type	Start	Stop
Parity1	1	O	2	4
Parity2	5	O	6	14
Parity3	15	E	16	19
Parity4	20	O	21	30

Data	7	6	5	4	3	2	1	0
ID low1	1	2	3	4	5	6	7	8
ID high2	17	0	0	0	0	0	0	19
Site low3	18	0	0	0	0	0	0	20
Site high4	9	10	11	12	13	14	15	16

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Mask	0	1	1	1	1	0	1	1	1	0	0	0	1	0	1	1	0	1
Data	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	7
Parity	P1	O	O	O	P2	O	O	O	O	O	O	O	O	O	P3	E	E	E
Wiegand out	P1	6	5	4	P2	2	1	0	7	6	5	4	3	2	P3	0	7	7

A horizontal scrollbar is visible at the bottom of the window.

Note:


Wiegand settings are out of scope for common end user. Please ask your installer to set the parameters and do not change it later.

www.visual-plus.com

10. WIEGAND PROTOCOL DESCRIPTION

The data is sent over the lines DATA 0 for the logic "0" and DATA 1 for the logic "1". Both lines use inverted logic, meaning that a pulse low on DATA 0 indicates a "0" and a pulse low on DATA 1 indicates a "1". When the lines are high, no data is being sent. Only 1 of the 2 lines (DATA 0 / DATA 1) can pulse at the same time.

Example: data 0010....

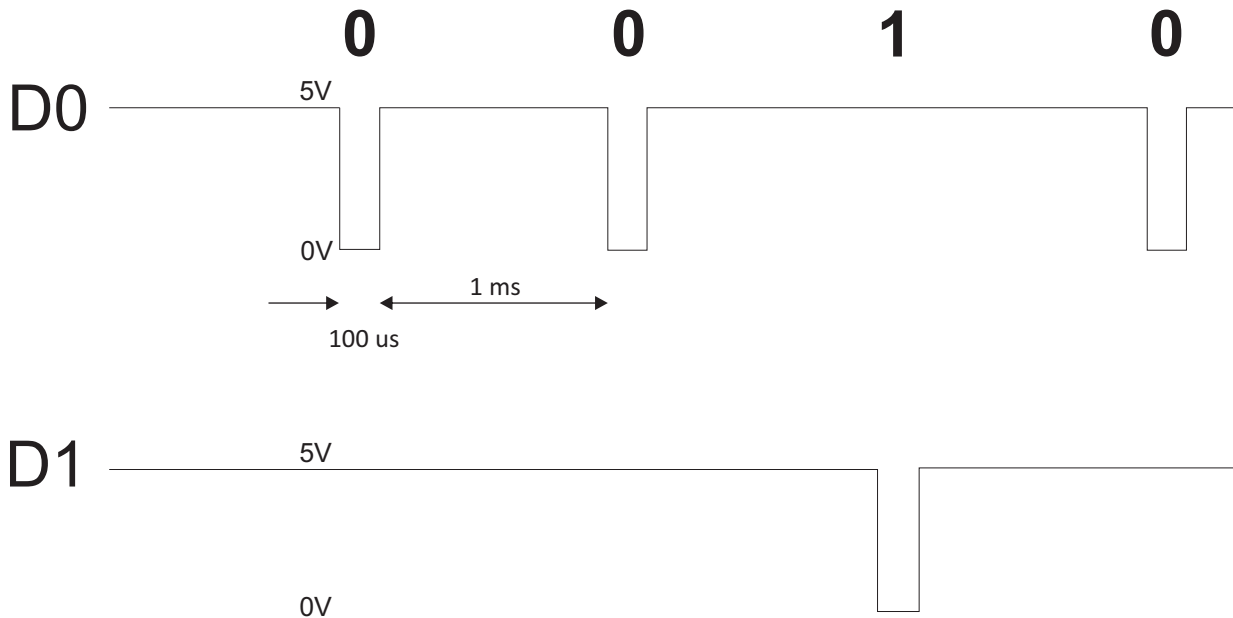

Data bit 0 = approximately 100 us (microseconds)

Data bit 1 = approximately 100 us (microseconds)

Time between two data bits: approximately 1 ms (millisecond). Both data lines (D0 and D1) are high.

Description for the 26 bits Wiegand format


Each data block consists of a first parity bit P1, a fixed 8 bits header, 16 bits of user code and a 2nd parity bit P2. Such a data block is shown bellow:

	Parity bit (bit 1)	+ 8 bits header	+	16 bits user code = 2 bytes	+	Parity bit (bit 26)
	P1	XXXXXXXX		XXXXYYYY YYYYYYYY		P2
Example:		170		31527		
	1	10101010		01111011 00100111		0

Note: Parity bits are calculated as follows:

P1 = even parity calculated over the bits 2 to 13 (X)

P2 = odd parity calculated over the bits 14 to 25 (Y)

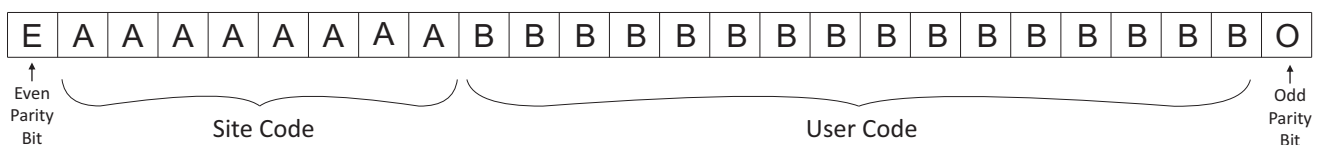

11. SAFETY PRECAUTIONS

Do not install the device in a place subject to direct sun light without protective cover.

Do not install the device and cabling close to a source of strong electro-magnetic fields like radio-transmitting antenna.

Do not place the device near or above heating equipments.

If cleaning, do not spray or splash water or other cleaning liquids but wipe it out with smooth cloth or towel.

Do not let children touch the device without supervision.

Note that if the sensor is cleaned by detergent, benzene or thinner, the surface will be damaged and the fingerprint can't be entered.

12. TROUBLESHOOTING

The Red Led on the Biometric Reader is blinking all the time	There were 15 unsuccessful attempts of authentication (Finger or PIN). The Red LED will turn off after the first accepted finger or PIN.
Enrollment from desktop reader can be done, but the Fingerprints are not sent to all Biometric Readers in the network	<ul style="list-style-type: none">·Check the Ser.No of the Readers.·Check if proper termination is done as described beforeCheck if the Communication wires (A & B) are properly connected to the reader
The Biometric Reader is not powered ON. The tricolour LED is OFF.	Check the power Supply (red & black wire)
Fingerprint (or PIN Code) is recognized (the tricolor LED is green), but the controller reports other ID number and the access is denied	<ul style="list-style-type: none">·If the user is not deleted from the reader and the same user is enrolled again with new ID, the reader will recognize the finger with the first ID. To resolve this, delete all users from the reader and upload all users to the reader·Check the Wiegand Bus (yellow & white wire)·Check if the ground of the controller and the Biometric Reader is the same Check if the length between Biometric Reader and the controller is less than 50 m
Electro static discharge influences the Fingerprint Scan.	Connect the housing of the Biometric Reader to the earth wire
Reader reading performance is decreased	<ul style="list-style-type: none">·Check if fingerprint reading area is dirty. Do not clean the device with any form of liquid. Use soft and dry cloth only Reading area is damaged. If the damage is minor, try to calibrate the sensor
Fingerprint is not recognized normally	<ul style="list-style-type: none">·Retry after drying the wetness of your finger·When your finger is too dry, touch your forehead and try again When you have a cut on your registered finger, register another fingerprint



As per the European Directives 2002 / 95 / EC & 2002 / 96 / EC

This product is in compliance to the restriction of hazardous substance - ROHS under (Directive 2002 / 95 / EC) and this product should not be disposed in the municipal waste stream but should be handed over to any designated collection facilities appointed by the government or the local authorities to enable recovery & recycling as per WEEE (Directive 2002/96/EC). w.e.f 1st july'2006



Selon les Directives Européennes 2002/95/EC et 2002/96/EC

ce produit est en conformité avec la norme ROHS pour la restriction des substances dangereuses (Directive 2002/95/EC) et ce produit ne doit pas être déposé avec les ordures municipales mais doit être remis aux organismes gouvernementaux ou municipaux indiqués et désignés à cet effet pour permettre leur récupération et leur réutilisation selon la directive WEEE (Directive 2002/96/CE) w.e.f 1st july'2006

In conformità alle direttive europee 2002 / 95 / CE e 2002 / 96 / CE

Questo prodotto è in conformità con la restrizione d'utilizzo delle sostanze pericolose - ROHS (Direttiva 2002 / 95 / CE) e questo prodotto non deve essere gettato nella raccolta rifiuti indifferenziata ma deve essere portato alle apposite raccolte rifiuti realizzate dal governo o dalle autorità municipali per permettere il recupero e il riciclo dei materiali come da normativa WEEE (Direttiva 2002/96/CE). w.e.f 1st july'2006

A partir de las Directivas Europeas 2002/95/EC y 2002/96/EC

Este producto cumple con la restricción de sustancias peligrosas- bajo ROHS (Directiva 2002/95/EC) y este producto no puede eliminarse en la red municipal de basuras y debe manipularse según las instrucciones del gobierno o autoridades locales para permitir su recuperación y reciclado a partir de WEEE (Directiva 2002/96/EC) w.e.f. 1º de julio de 2006

Gemäß EU Richtlinie 2002 / 95 / EC & 2002 / 96 / EC

Dieses Produkt erfüllt die Vorschriften zur Beschränkung gefährlicher Substanzen gemäß - RoHS (Richtlinie 2002 / 95 / EC). Es darf nicht mit dem Hausmüll entsorgt werden, sondern ist zwecks Aufbereitung und Verwertung gemäß WEEE (Richtlinie 2002/96/EC) bei einer dafür behördlich eingerichteten Sammelstelle abzugeben. w.e.f 1. Juli 2006

Volgens de Europese Richtlijnen 2002 / 95 / EC & 2002 / 96 / EC

Dit product is overeenkomstig met het risicobeperkingswezen volgens de richtlijnen 2002 / 95 / EC en dit product mag niet verloren gaan in de gemeentelijke afvalstroom maar zal moeten worden overhandigd aan een aangestelde inzamelvoorziening aangewezen door regering of gemeente voor herstel en recycling volgens (WEEE) (Richtlijn 2002/96/EC). (W.E.F.) 1 juli 2006

Visual Plus Corporation, s.a.

*Drève Richelle 161
WOP G - Bte 34
1410 Waterloo - Belgium*



a Visual **Plus** Corporation Company